

3.2) Now "Configure Wi-Fi" now new page will open like this:



Figure 7

3.3) Select your preferred WiFi with proper password and then save. In case your WiFi network is not visible in the list scan again.



Figure 8

On successful configuration, WiFi LED (yellow) will be ON.

NOTE

- a) Shakti IoT Dongle is designed to work with GSM on priority, WiFi is always secondary.
- b) For using Wi-Fi remove SIM card then connect shakti dongle.
- c) On successful TCP connection WI-FI yellow LED will blink in every second.

4. Troubleshooting

- 1) If Pulse LED is constantly ON/OFF, check main device power supply or restart the device.
- 2) If signal LED not glowing, check sim card / signal strength.
- 3) If Wi-Fi LED not glowing, check Wi-Fi network / reconfigure Wi-Fi settings.

5. Contact Shakti to integrate IoT Dongle to other products & solutions.

SHAKTI PUMPS (INDIA) LIMITED

Plot No. 401, 402, & 413, Industrial Area, Sector - 3, Pithampur - 454774,
Dist. - Dhar, (M.P.) - INDIA, E-mail: info@shaktipumps.com,
Visit us at : www.shaktipumps.com
Toll Free No. 1800 103 5555

Nov./2019-20/L2/000 SAP : 2000017483

SHAKTI RMS/IoT DONGLE



- Remote Monitoring and Control
- In-built Data Logger & RTC
- Compatible with GSM, WiFi & Bluetooth

1. Product Appearance

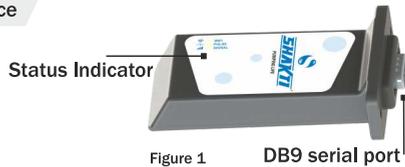


Figure 1

Status Indicator:

Pulse LED(Green)	Blink in every second	Normal
	Constant ON/OFF	Abnormal
Signal LED (RED)	ON	Normal (signal strength good)
	OFF	Abnormal (Signal low / Zero)
Wi-Fi LED (yellow)	ON/ Blink	Normal
	OFF	No WiFi Network

2. Installation and Connection:

For installing the SHAKTI IoT dongle. Follow these steps :

Step1: Remove the cover and take out the motherboard.



Figure 2

Step2: Insert SIM card as per the correct direction marked.

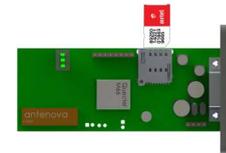


Figure 3

Step3: Put the motherboard back into the enclosure.

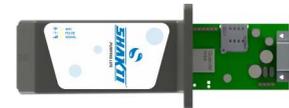


Figure 4

Step 4: Insert the dongle into DB9 port and use two M3x10 screws to fix the dongle along with gasket.

3. Configuration

Step1: Connect the "Shakti IoT dongle" to the main device and check the "pulse LED" (green) blinking in every second.

Step2:

If the SIM card is present in the "Shakti IoT dongle" and 2G network is available in that area the Signal LED (RED) will be ON. (*Note* it will be ON only in good signal strength).

Step3:

To configure the Wi-Fi follow these steps:3.1)

Turn ON Wi-Fi on your Mobile and select "SHAKTI_DONGLE and connect it with the password "shakti123".

An HTML page will open in your browser otherwise browse <http://192.168.4.1>. You will get the HTML page like this:



Figure 6